

Installation Manual

APLIVI 50 Drain bushing to pool cabinets

APLIVI 75 Drain bushing to pool cabinets

- Read the installation manual carefully before beginning the installation
- Follow the installation manual

It is recommended that the product be installed by a PHS professional.

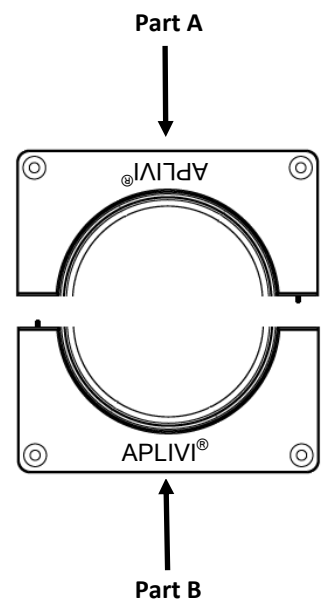


FIGURE 1.



1: Make a through hole in the basin cabinet for the drain pipe. Leave space of at least 25 mm between the drain pipe and the back wall of the cabinet. Aperture size up to 75 (APLIVI 50) or 100 mm (APLIVI 75).

FIGURE 2.



2: Apply the adhesive mass around the through hole and the drain pipe.

FIGURE 2b.



2b: If necessary, use pliers to remove part of the inner edge from any drain sleeve.

FIGURE 3.



3: Carefully place parts A and B on top of the adhesive mass around the drain. Make sure that the alignment pins of the parts match. Squeeze the parts together.

FIGURE 4.



4: Fasten the screws (4 pcs).

FIGURE 5.



5: Seal and finish the product with adhesive mass. In addition, seal the pool cabinet (and any other throughs) according to the building regulations.